

# Preference Eze

Preference Eze tiles offer the professional look of wall-to-wall carpet while providing the comfort of anti-fatigue support. These cushioned tiles are ideal for pharmacies or other locations where employees or customers stand for long periods of time. The ergonomic benefits help provide comfort, enhance productivity, and improve retention for employees. With a non-directional surface, Preference Eze tiles are easy to install and can be easily replaced in the event of damage or wear.



# PRODUCT INFO

## **Entrance Carpet Tile**




Charcoal


Silver

\*Custom colors available with minimum volume requirements.



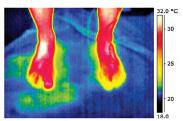

Concrete

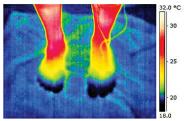

Anti-Fatigue Matting

Thermography uses infrared cameras to detect heat and blood flow patterns in body tissue. These thermal images reveal the contrast in how the feet and lower legs react to standing on concrete (top) versus antifatigue matting (bottom). When you stand for long periods, your muscles and tissue can become inflamed which is typically what causes the pain associated with standing. As tissue becomes inflamed it generates heat. When polled after standing for 90 minutes, subjects standing on the concrete reported moderate to extreme discomfort in their feet, legs, upper back, and neck while subjects on the anti-fatigue matting reported little to no discomfort in those areas.







Specifications	
Size	18" x 18"
Tiles Per Case	10
Overall Thickness	5/8″
Material	Polypropylene
Material Weight	37 ounces/yard²
Backing	Rubber foam
Installation	Glue down
Performance	5 years* *Under normal use

100% Customer Satisfaction\*
\*Based on the life of the product

### **CLEANING INSTRUCTIONS**

Matworks strongly recommends cleaning your carpet tiles daily to maintain functionality and appearance. The maintenance schedule should start on the installation date to achieve the maximum life expectancy of the product.

#### **DAILY CLEANING:**

- Vacuum daily with a commercial-grade vacuum cleaner with a rotary power brush or beater bar.
- Spot clean lightly using a detergent with a neutral pH.

